


# Assembling Guide

Thank you for choosing our product!

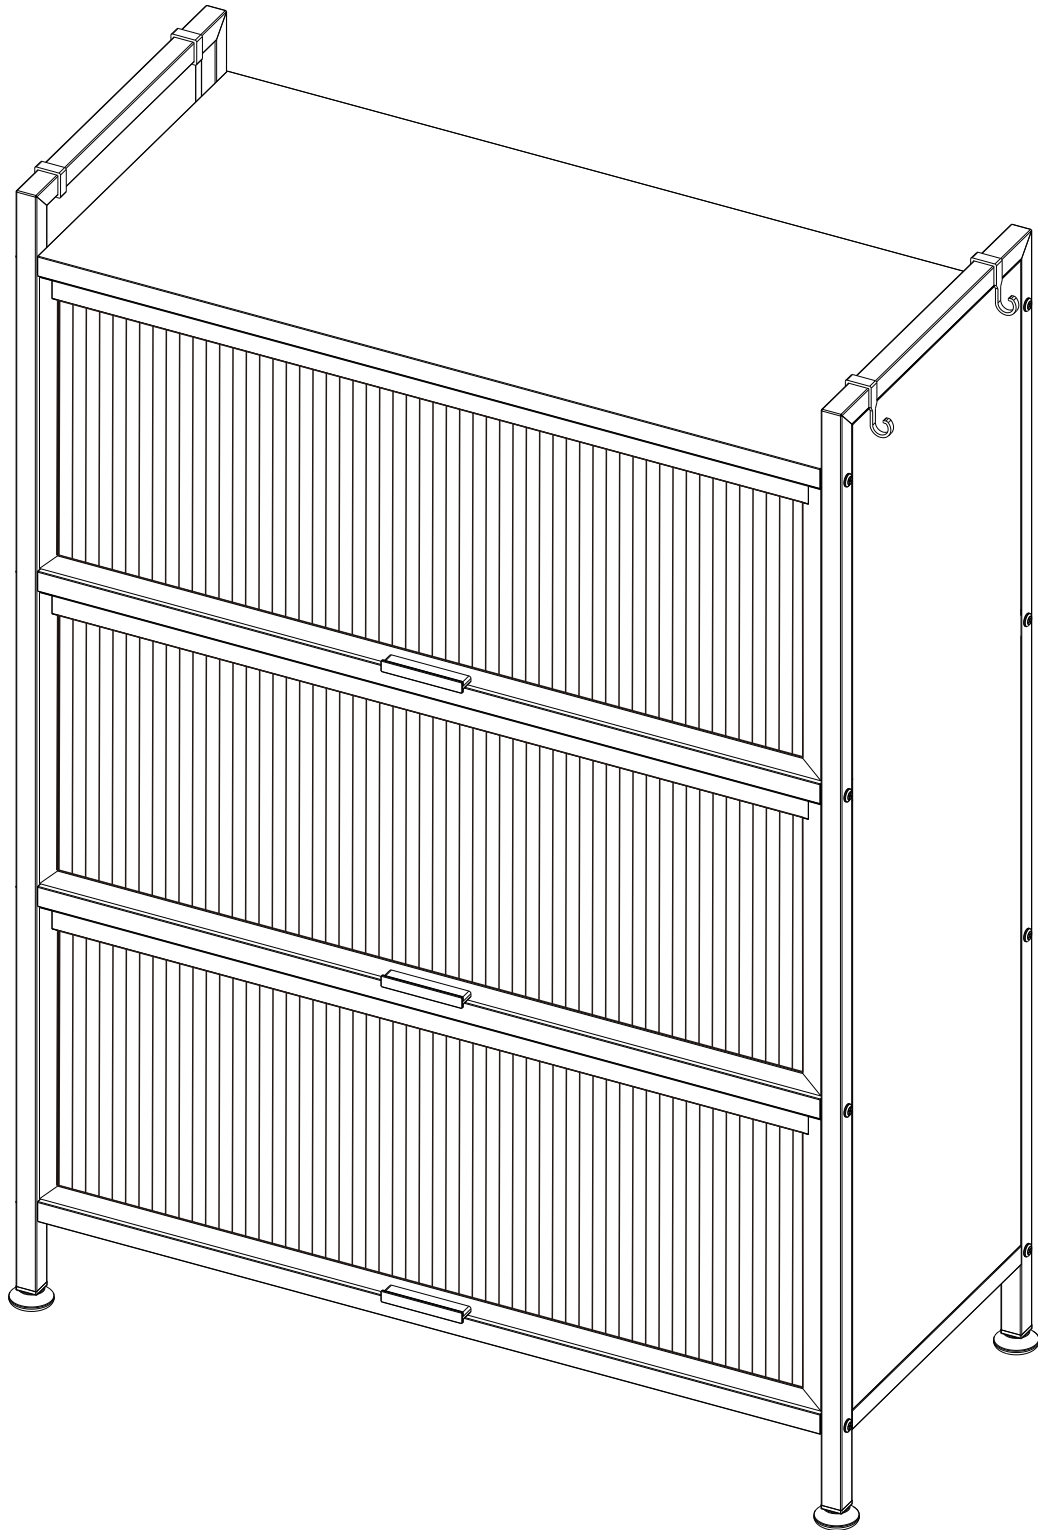








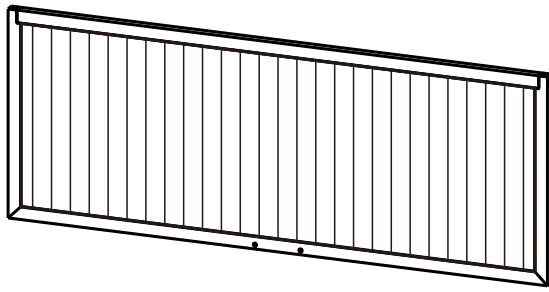

*Thank you for lighting up another coordinate of our product on the map. We are committed to creating high-quality home living, making every household filled with warmth and comfort.*


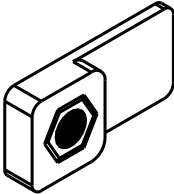



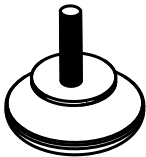

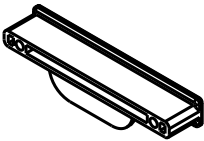

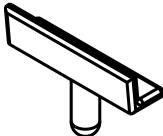
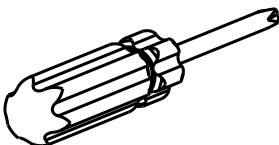



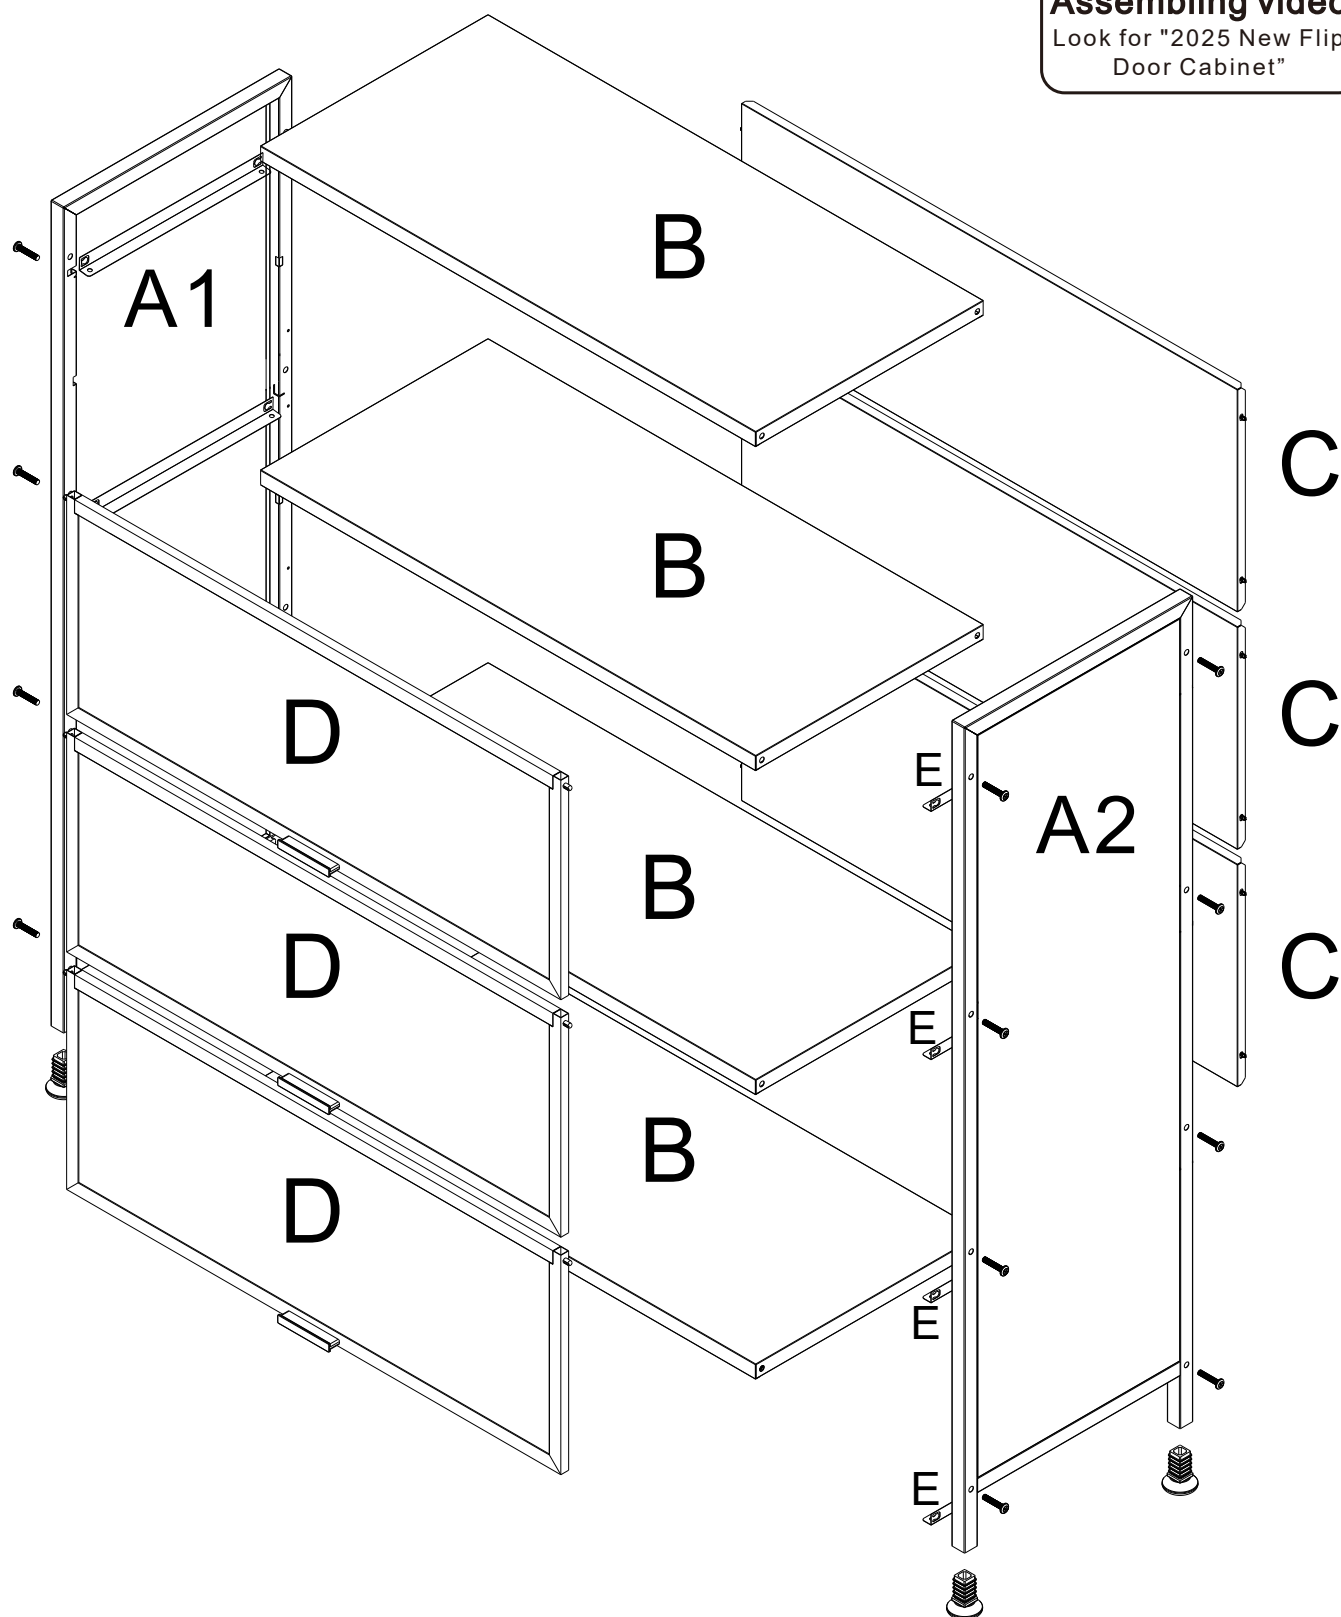

Assembling video  
Look for "2025 New Flip  
Door Cabinet"


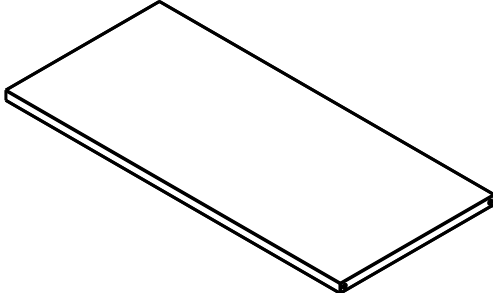


<p>A1 Left Panel x1</p>	<p>A2 Right Panel x1</p>
	
<p>B Shelf x4</p>	<p>C Back Coverx3</p>
	
<p>D Flip Door x3</p>	<p>E Door Rail x6</p>
 <p>3</p>	


<p>F Screws for Side Panels x16</p> 	<p>G Nut Plate x16</p> 
<p>H Screws for Back Panels (M4x8) x12</p> 	<p>I Door Hinge Spring x6</p> 
<p>J Foot Plug x4</p> 	<p>K Adjustment Foot x4</p> 
<p>L Hooks for Side Panels x4</p> 	<p>M Handle x3</p> 
<p>N Screws for Handles (M4x20) x6</p> 	<p>O Door Clips</p> 
<p>P Screwdriver</p> 	<p>Q Handy Tool for Door Hinge Spring x1</p> 

**We always provide some extra screws for backup.  
Don't worry if you have some left over after installation.**

1. Insert the door rail E to the back edge of the side panel A1 first, then the front edge.

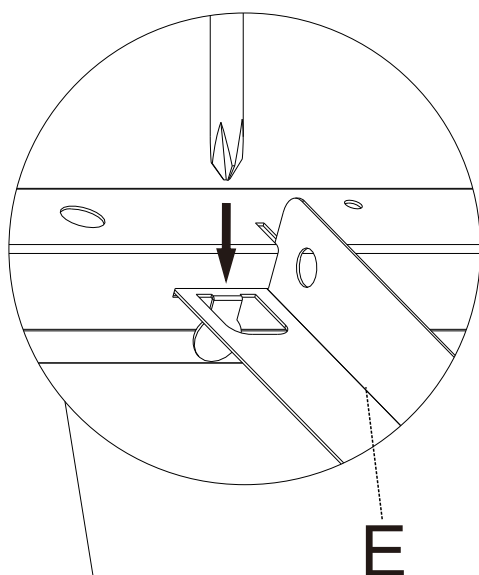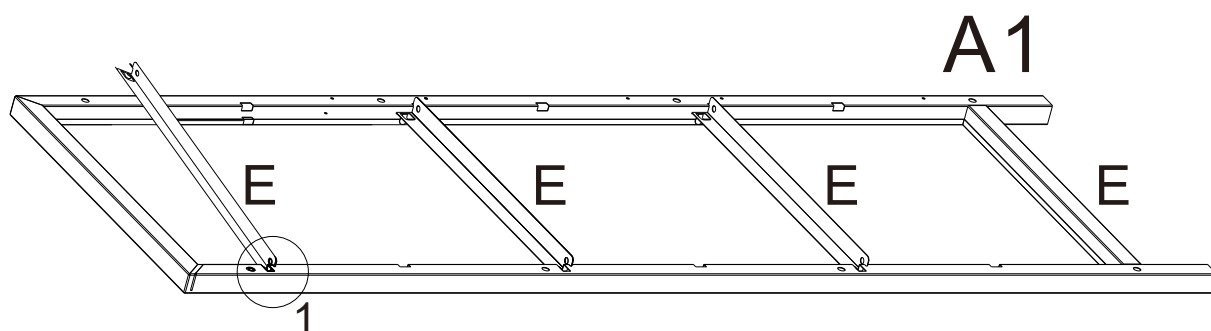


2. Use a screwdriver P to secure the stopper bar. Then repeat to another side panel A2.

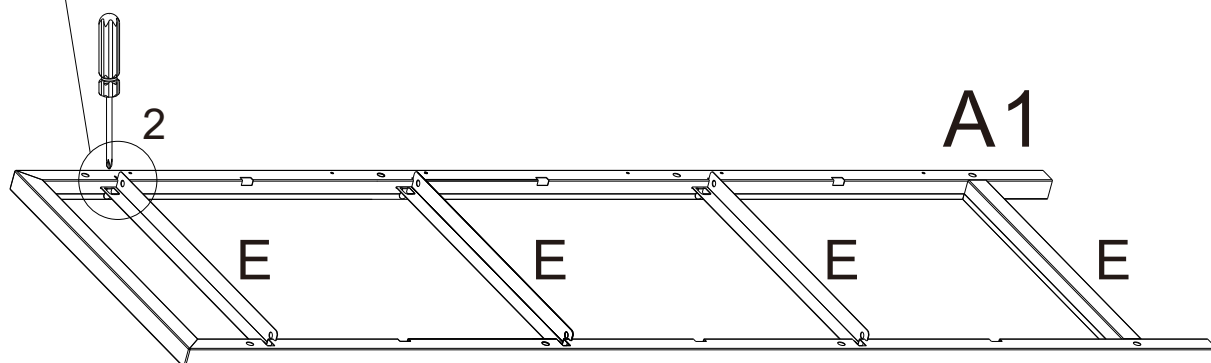


## STEP 2

Use screws F and nut plate G, to secure the shelf B to the side panel A1 and A2. Please tighten the screws by 50% first, once all shelves are in placed, then tighten all screws.

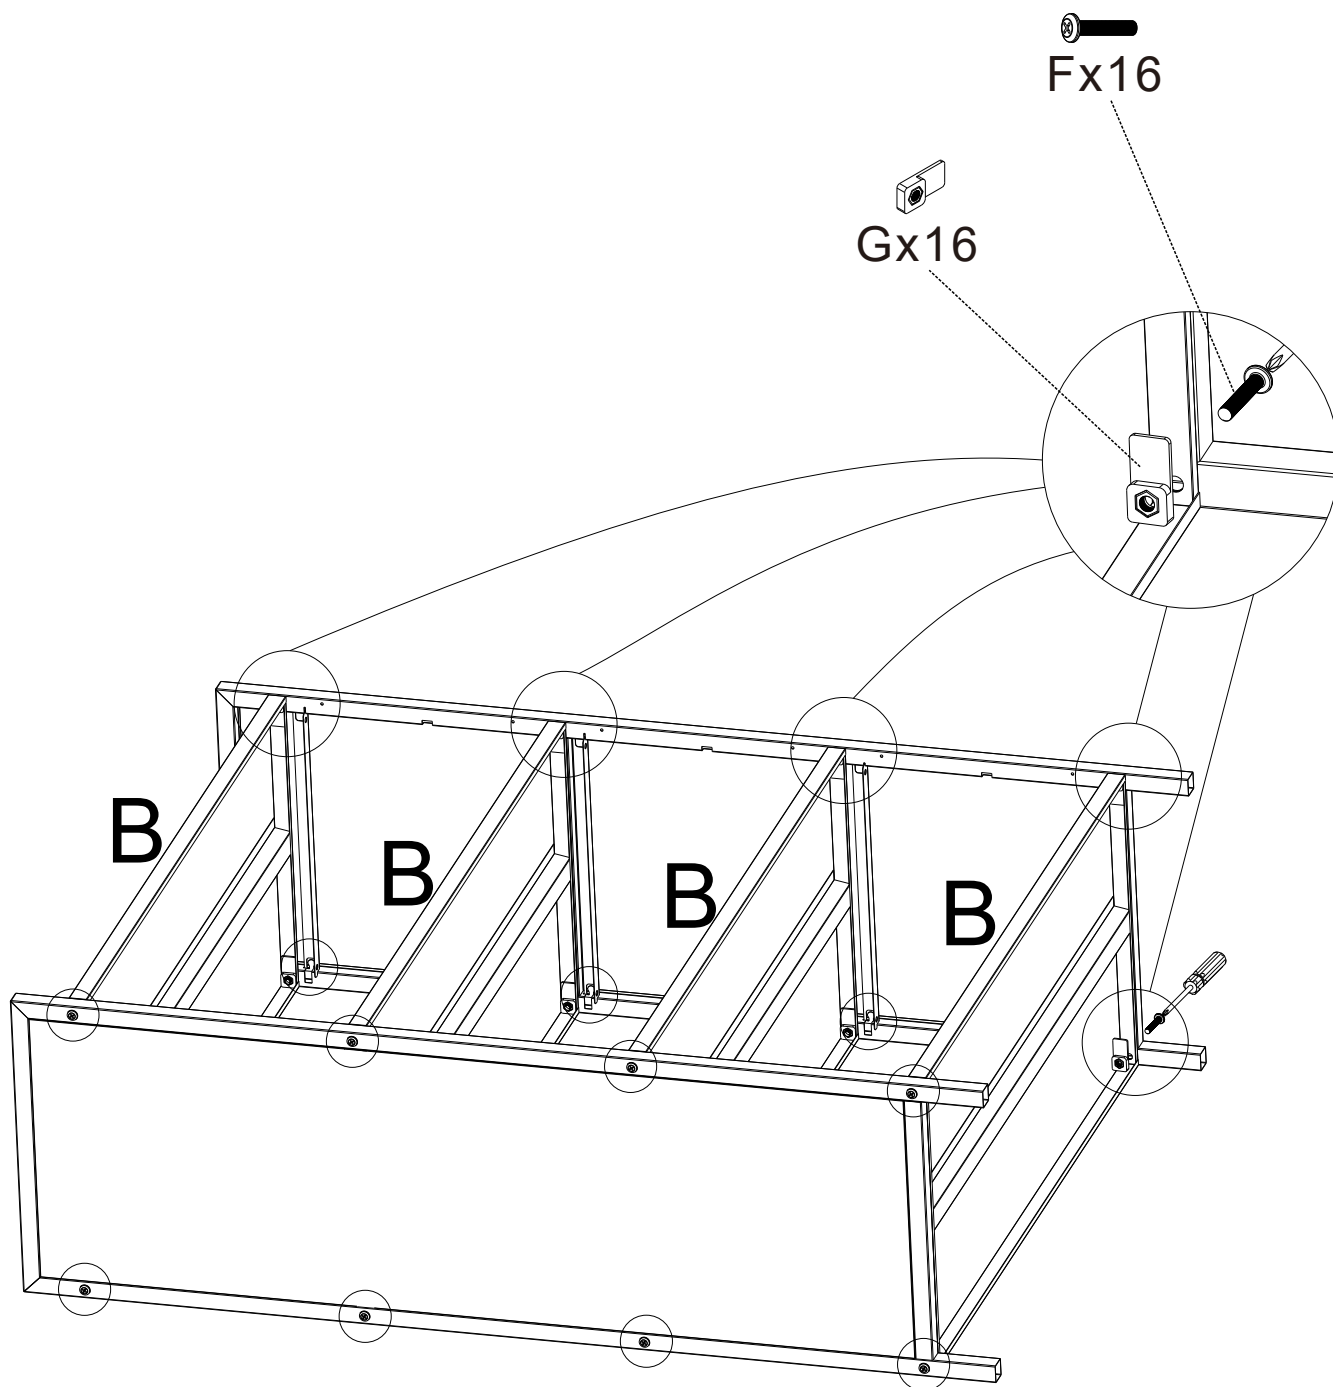


Use screw H to secure the back panel C to the side.

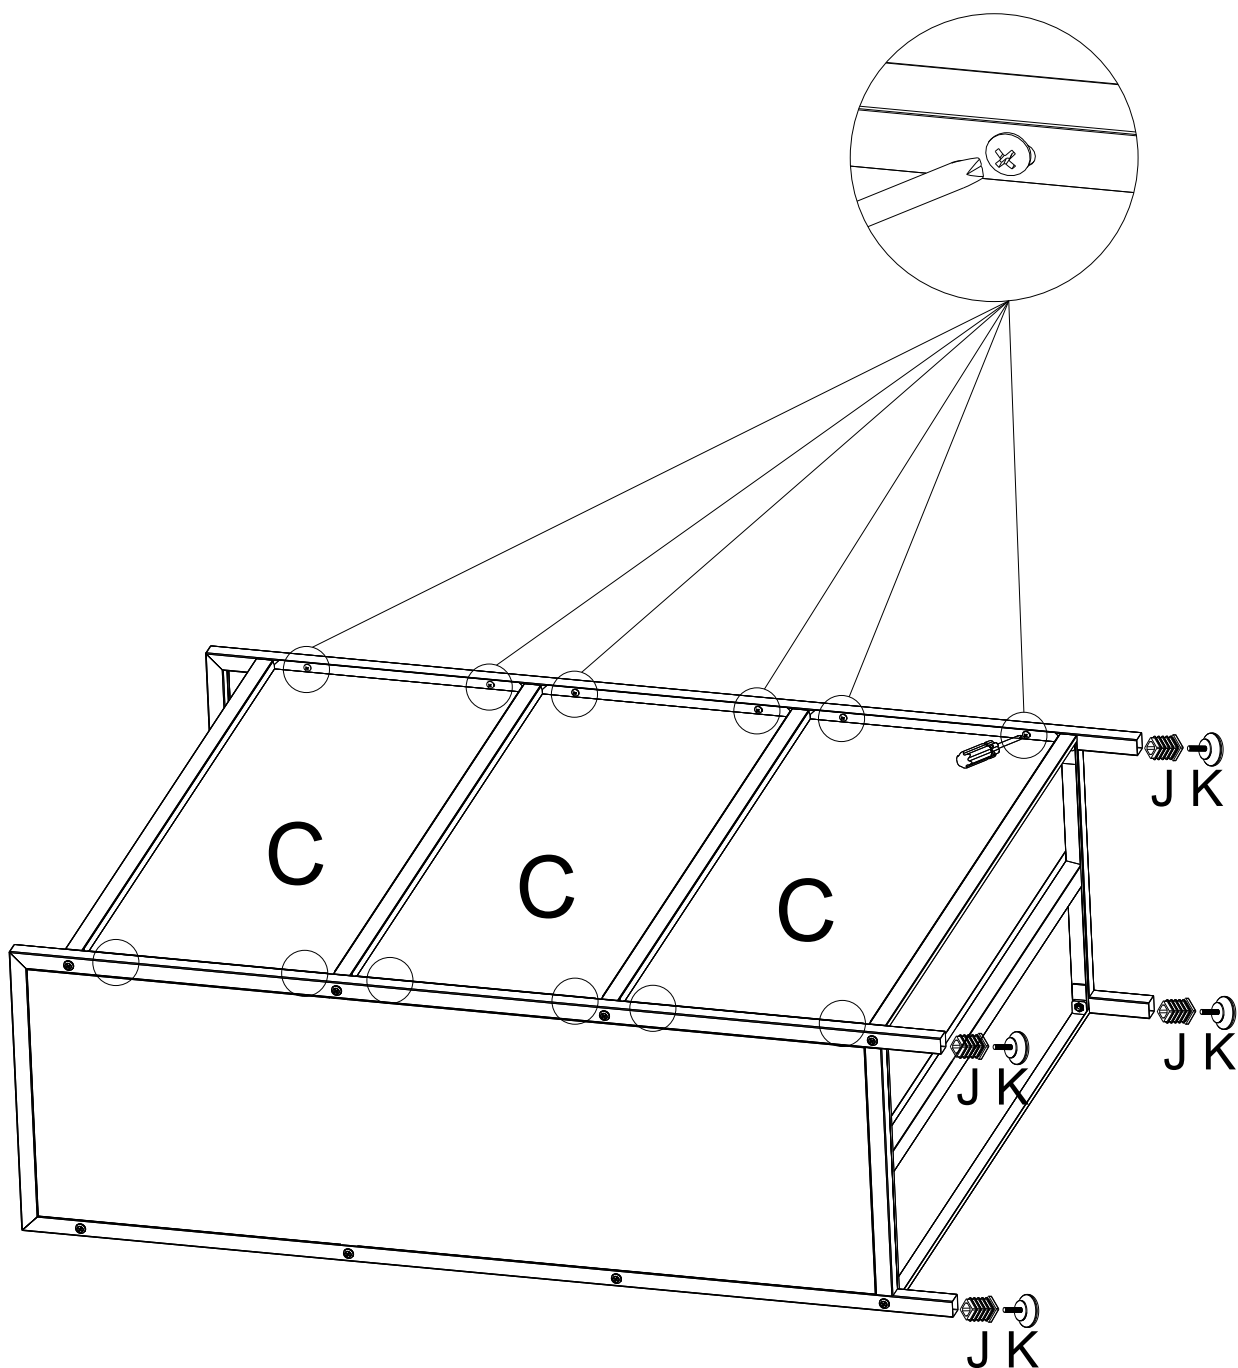


Insert the foot plug J and then twist in the adjustment foot K.





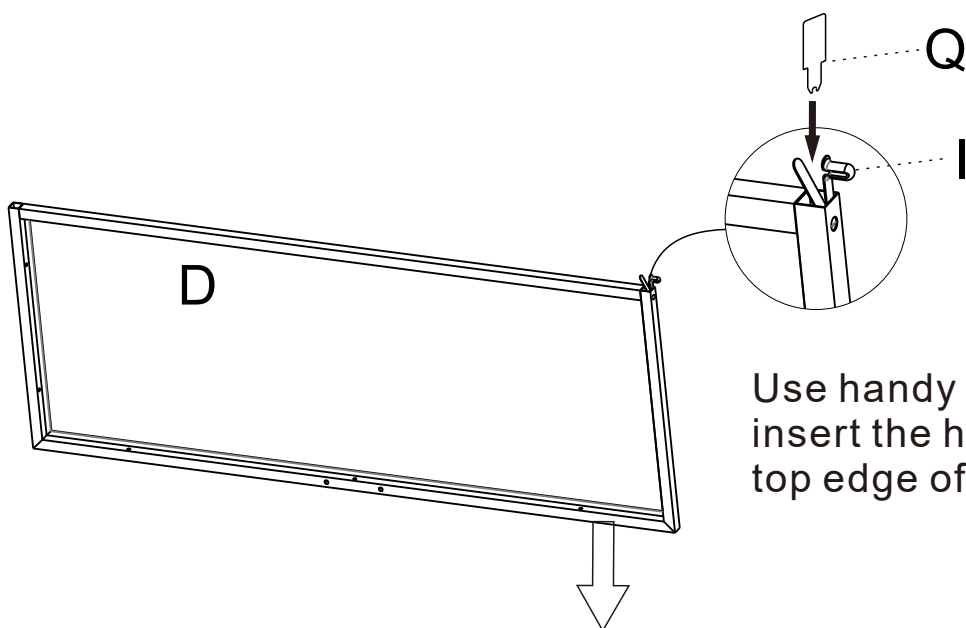


Use handy tool Q to help to insert the hinge spring I into top edge of the door frame D.

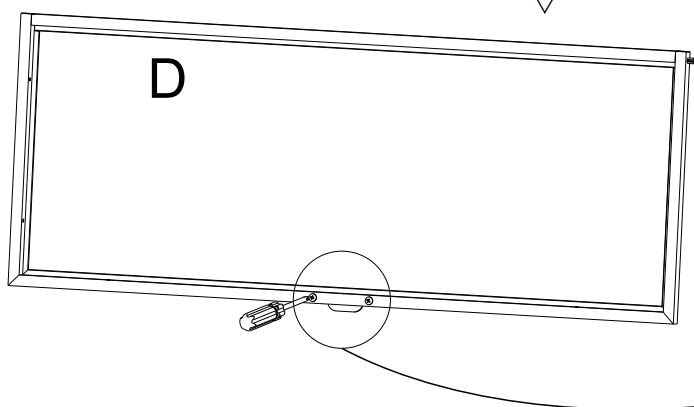


Use screw N to secure the handle M. Please be aware the small bar on the handle should be facing down.

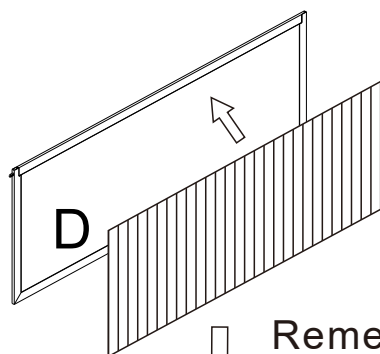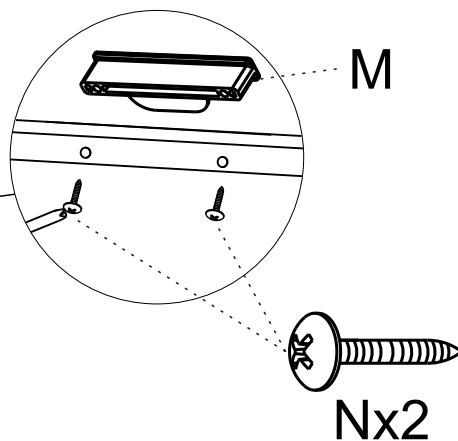


Remember to tear off the protective film on the surface in advance

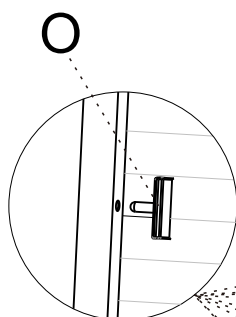


Then use the door clip O to secure all futed PC sheet to door frames.

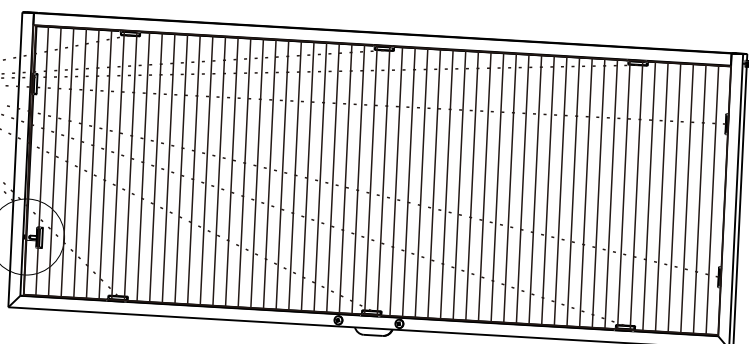

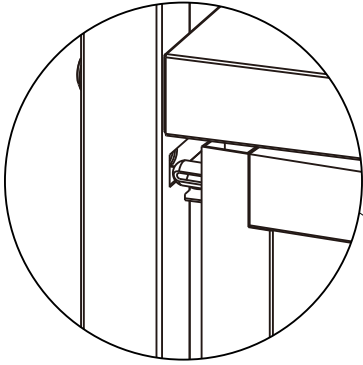

Press the assembled I  
to install the door D to  
the cabinet body.

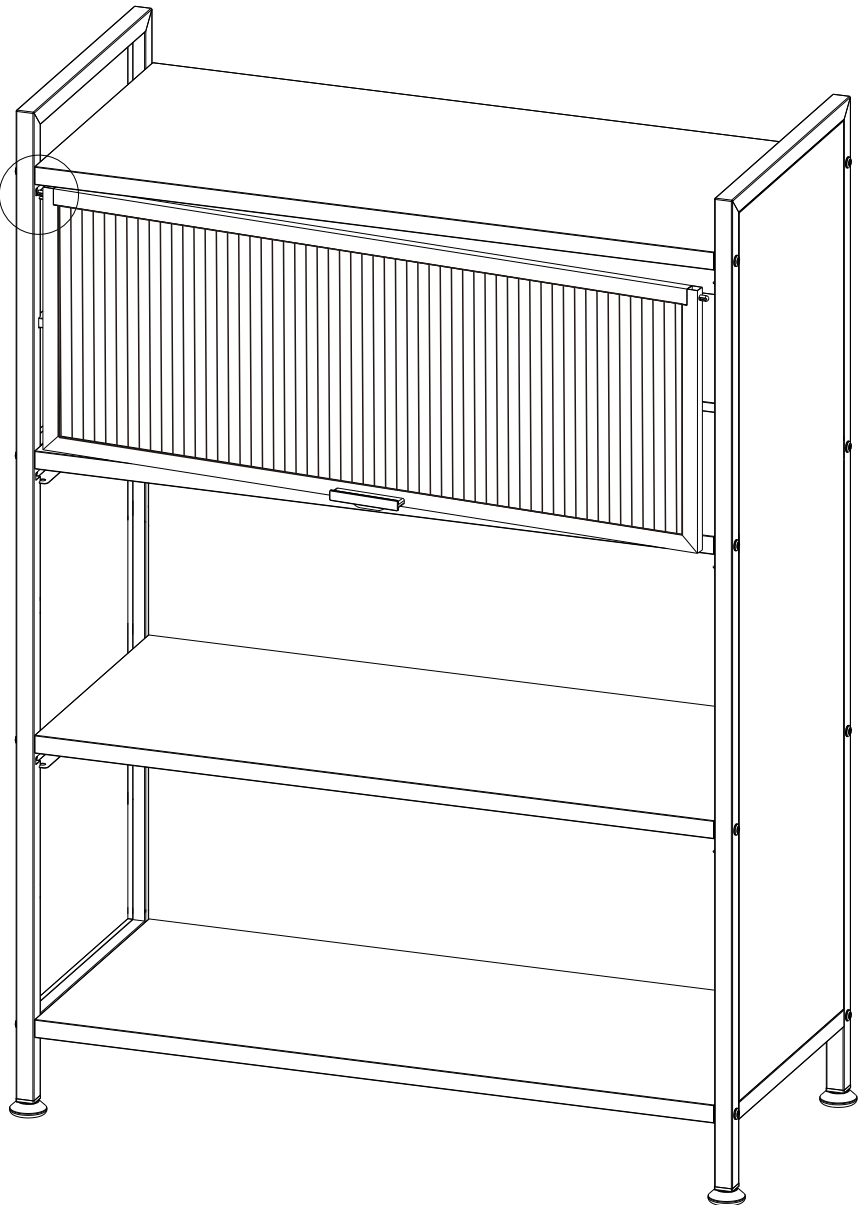

## STEP 6

Install all door panels D in sequence. Then put the hooks L on.  
Congratulations! You made it!

